

NORDIC HIFI

Knowledge Database

Search

nordichifi.com/

English

[Home](#) / [Active Speakers](#) / [Argon Audio FENRIS](#) / [Manual: Argon Audio FENRIS](#)



Manual: Argon Audio FENRIS

 Last updated on May 30, 2025 at 8:33 PM

Argon Audio FENRIS Active hi-fi speakers | Unboxing & Setup (DA, DE, EN, ...)




1. Contents of the box:

- Argon Audio FENRIS Speakers
- Front covers with magnet mount
- Quick Start Guide
- Power cable
- Speaker cable (3 meters)
- Remote control w/batteries
- 8x Isolation feet (Fenris A4 & A5)

We recommend that you keep the original box and packing material for future transportation.

2. Usage, controls and connections

2.1 Overview of the back panel (inputs and connections)

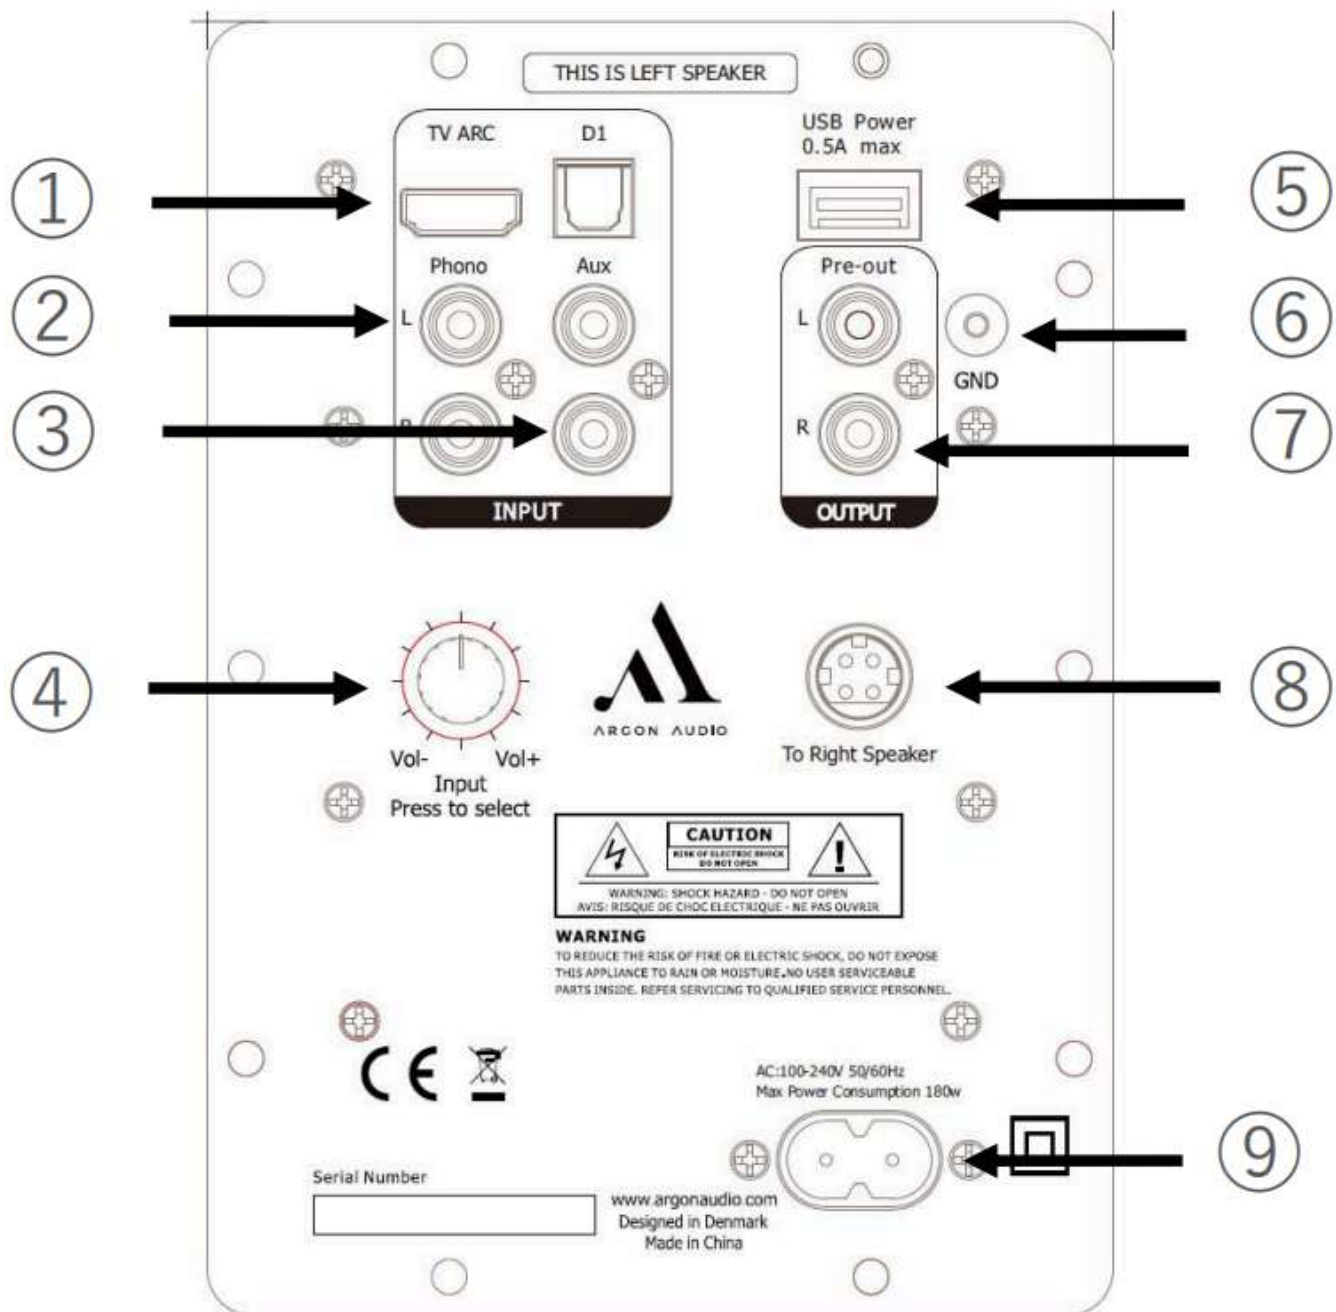

1. TV ARC And Optical Input

For TV sound from any TV that supports HDMI ARC (2.0 PCM only).

To its right, D1: optical input for digital sources (max 24 bit/48 kHz).

2. Phono

RCA input for turntables.

For connecting a turntable with an MM or MC High output cartridge.

Remember to connect "Ground" (7) as well

(Some turntables don't use a separate ground).

3. **Aux**

Line in for analogue sources

Connect any analogue audio source to the Left & Right RCA input.

E.g. CD player, computer, DAC, etc.

4. **Volume/input knob**

Turn clockwise/anti-clockwise to adjust volume.

Press to change the input

5. **USB power**

Charge or power any 5V/0.5A USB device

6. **Ground (GND)**

Connection for turntable ground

7. **Pre-out**

For subwoofer connection etc.

8. **Speaker output**

Connect to the passive speaker with the included speaker cable

9. **Power Plug**

Insert the power cable and connect it to an electric outlet

2.2 Overview of the Remote Control



1. Power ON/OFF

Press to turn the power **ON** or **OFF**.

2. Input selector

Press to choose your desired input source

Press and hold BT to pair a new Bluetooth device or remove all paired devices if already paired (Led will blink when the speaker is in pairing mode).

3. Volume up/down

Press to adjust the volume up or down.

4. Play/pause

Press to play/pause on the playback device
(Only when using Bluetooth).

5. Change track

Press to skip track forward or backward on the playback device
(Only when using Bluetooth).

6. Mute or un-mute the sound

Press to Mute or un-mute the sound.

3. Quick Start Guide

1. Connect the speakers using the included speaker cable.
2. Connect the power cord to an electric outlet and into the back of the left speaker (which has the amplifier).
The LED light on the speaker will turn on.
3. To pair a Bluetooth device, turn on the speakers and press and hold 'BT' on your remote for about 3 seconds, until the LED starts blinking.
Your speakers are now in pairing mode.
4. Activate Bluetooth on your playback device and scan for available devices. Find and select "Argon Audio FENRIS" to connect.
5. The LED light on the speaker will change to solid blue.
You're now ready to start listening to music!
6. Besides Bluetooth, your FENRIS speakers have four more inputs: TV ARC, D1, AUX, and Phono. FENRIS will automatically switch between the inputs (except Phono), but you can also use the included remote control or press the volume/input knob on the back to select your desired input.
7. When using the TV ARC input, you might need to set the digital sound output on your TV to PCM/Stereo.
This setting is usually located in the TV's audio settings menu.
You also want to make sure HDMI ARC/CEC is activated on the TV.
For some TVs, you need to disable the eARC function so that the TV uses ARC instead.

More details in the [troubleshooting](#) article
Otherwise, consult your TV manual to see how.

8. When connecting a turntable to the Phono input on the FENRIS speaker, remember to also connect the ground wire from the turntable to the metal ground screw.

(Some turntables don't use a separate ground, in that case, the ground screw can be ignored)

9. If you have an active subwoofer, it can be connected to the Pre-out output, using a pair of RCA cables

10. New speakers need to get "run in" just like new shoes need to be "broken in"

During this time the speakers' soundstage might change a lot before settling.

We recommend a running-in time of your speakers of approximately 30-50 hours at a normal listening level before the speakers are run in.

4. Special functions and features

APU (Auto Power Up)

When the FENRIS speakers receive input from any connected source (except Phono), they will automatically power on (if powered off) and switch to the right input. This is called Auto Power Up.

NOTE: this will not happen if the speakers are already powered on and playing from another source.

You can disable Auto Power Up (APU) if needed: simply press and hold the power button on the remote control for 5 seconds while the speakers are on. The speakers will now power off with APU disabled. This will also disable automatic power off, meaning you need to turn off your speakers manually.

To enable APU again, simply press and hold the power button for 5 seconds again when the speaker is powered off.

Turn On/Off Noise Gate

The Fenris speakers are equipped with a noise gate. This gate makes the speakers quieter when nothing is being played.

If you want to enable or disable the noise gate, you can do so by: Long-pressing the Play/Pause button on the remote. The LED will flash yellow or green.

Yellow: The noise gate is **ENABLED**.

Green: The noise gate is **DISABLED**.

NOTE: If your Fenris Speakers don't respond when long-pressing the Play/Pause button on the remote, they are likely running on old firmware. To update the speakers, please follow [this link](#).



Bluetooth unpairing

You can always press and hold the ‘BT’ button to remove all Bluetooth connections. Please note that Bluetooth unpairing is only available when the Bluetooth input is selected.

LED dimming

To enable the dimming of the LED on the front of the speaker, power on the speaker and hold the D1 button on the remote for 5 seconds. The LED will now turn off after 5 seconds after switching inputs.
To disable it again, press and hold D1 for 5 seconds again.

5. Tips & Tricks

We strive to ensure you experience the full potential of your Argon Speakers. Therefore, we've put together an article containing valuable Tips & Tricks to help you achieve optimal performance with your speakers.

Article: [Tips & Tricks: SPEAKERS](#)

6. Specifications

	Fenris A4	Fenris A5	Fenris A55
Frequency range	52-22.000 Hz (± 6dB)	47-22.000 Hz (± 6dB)	38-22.000 Hz (± 6dB)
Bass/midrange driver	4"	5,25"	2x5,25"
Dimensions (WxHxD)	14 x 24 x 22 cm	17 x 28 x 22 cm	17 x 88 x 27 cm
Weight (Pair)	5.5 kg	7.2 kg	25.2 kg

- 2-way active speaker system with built-in 4-channel Class-D Amplifier
- Bass reflex system
- Output power: 2 x 50 watts (woofers), 2 x 25 watts (treble)
- Tweeter: 0,75" soft dome with neodymium magnet
- Energy usage in standby: <0,5 watts
- Outputs: Pre-out, 5V/0.5A USB-charge
- Magnetic front grills
- Auto power on/off on inputs incl. Bluetooth.



NOTE: Auto Power On does not work on the turntable input (Phono)

Inputs:

- TV ARC (HDMI ARC)
- Optical (Digital)
- L/R analogue stereo-in (RCA)
- Phono (MM)
- Bluetooth 5.0 (SBC)

Colors



Matte black with bronze trim rings



Matte white with silver trim rings



Ash with gold trim rings

Was this article helpful?



Argon Audio FENRIS

Manual: Argon Audio FENRIS

Troubleshooting: Argon Audio FENRIS

FAQ: Argon Audio FENRIS

Firmware: Argon Audio FENRIS

Related Articles

Manual: Argon Audio FORTE MK2

Manual: Argon Audio SA1 MK2

Manual: Argon Audio SA2

Manual: Argon Audio FORTE WIFI

Manual: Argon Audio SA1

© Nordic HiFi | Elevio by Dixa